

Quick Start Guide

for Using the
Co-Dx[™] Logix Smart[®] Influenza A and B, and SARS-CoV-2 Kit
(ABC-K-001)



1 Plate the Master Mix

- a. Load the Co-Dx Box software.




- b. In the Clean area, clean work surfaces with water > 10% bleach > water > 70% alcohol (in that order), or another equivalent method of cleaning that disinfects and degrades nucleic acids.




- c. Thaw the master mix (MM) and the negative control (NC) on ice.




- d. Briefly vortex and centrifuge the MM and NC reagents.

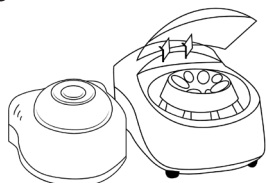


- e. Add 10 μ L of MM into every well that will be used (1 well for NC, 1 well for positive control [PC], and 1 well for each sample).

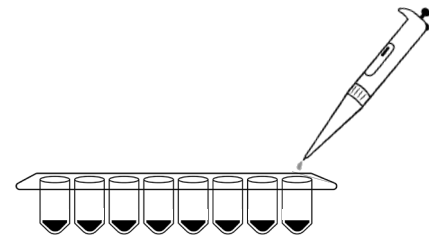

- f. Pipette 10 μ L of NC into the NC well and cap the NC well.

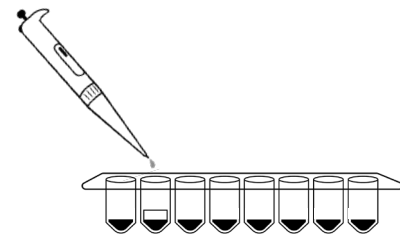

- g. Place reagents back into the freezer.

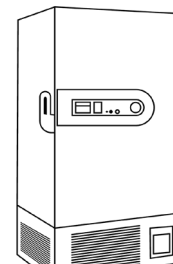

Perform in Clean Area

Perform in Clean Area

Quick Start Guide

(continued)

for Using the
Co-Dx™ Logix Smart® Influenza A and B, and SARS-CoV-2 Kit
(ABC-K-001)



2 Plate Samples and Positive Control (PC)

Perform in Positive Area

- a. Load the Co-Dx Box software.




- b. In the Positive area, clean work surfaces with water > 10% bleach > water > and 70% alcohol (in that order).



- c. Thaw the PC on ice.




- d. Briefly vortex and centrifuge all reagents.

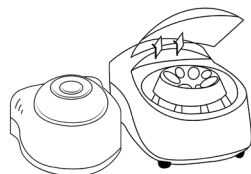

- e. Perform sample extraction, either using RNA extraction or lysis.

Perform in Positive Area

- f. Add 10 µL of the sample extract to the appropriate wells and cap the sample extract wells.

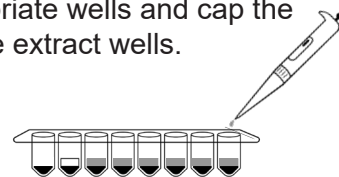


- g. Add 10 µL PC to the PC well and cap the PC well.



- h. Place capped tubes in the thermocycler, in appropriate locations and fill the rest of the carousel with blank tubes.



- i. (Optional): Cap all tubes and place samples and reagents back into the freezer.

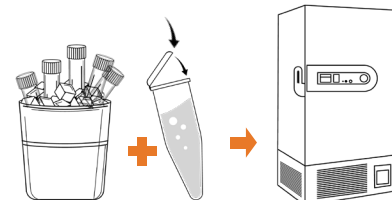

Quick Start Guide


(continued)

for Using the
Co-Dx™ Logix Smart[®] Influenza A and B, and SARS-CoV-2 Kit
(ABC-K-001)




3 Start the Run


- a. In the Co-Dx Box software, click **New**.

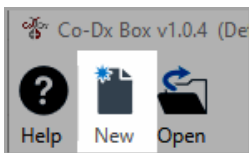


- b. Select an assay template and click **OK**.

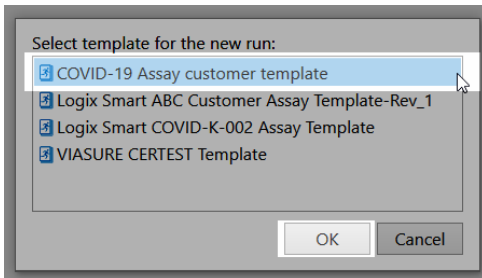


- c. Under **Run Setup**, select **Samples** and type sample information in the appropriate order.

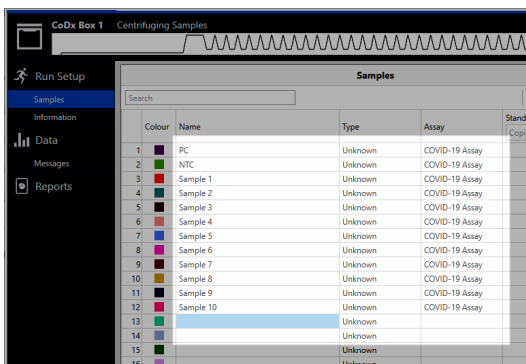


- d. Click **Information** and in the **Notes** field, type any needed information.

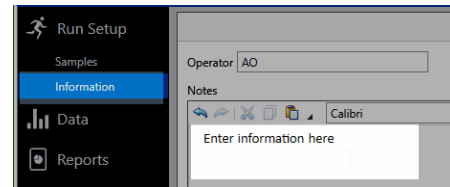

- e. Select the appropriate thermocycler and from the drop-down select **Start Run**.

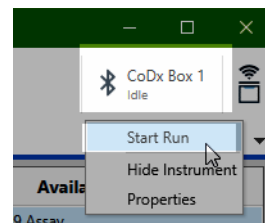

- f. Verify the tube clamp is in place and the appropriate reaction volume is listed, and select **Start**.

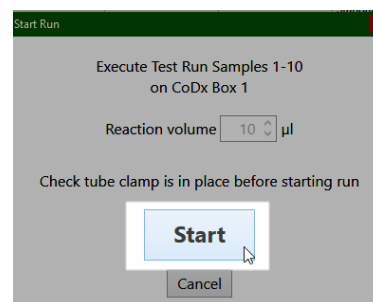

The run initializes and a progress bar gives an estimated time to completion.

Perform in Co-Dx Box Software

Perform in Co-Dx Box Software